

## uvex Wearability

The key to compliance



**uvex prescription safety spectacles** are individually adapted to the wearer's vision while offering the best possible protection in the workplace. We call this wearability. But what do we mean by that?

**Wearability = Compliance**. It is PPE that doesn't get in the way, allowing you to focus on the task at hand. Ultimately, it's the perfect balance of four main factors:



#### F۱٦

## One size does not fit all

It may seem obvious, but properly-fitting eyewear that has been selected for the individual, their workplace and takes into account compatibility with other PPE can help avoid accidents, reduce discomfort, increase productivity and give wearers confidence.



### **COMFORT**

## With proper fit comes comfort

Safety eyewear not only protects against mechanical hazards (workplace debris and contaminants), it should be free of pressure points, lightweight, breathable and not slip.

It's only when PPE fits well and is comfortable that it remains worn throughout the day.



### **PERFORMANCE**

## Industry leading technology

Our in-house expertise together with our UK based lens manufacturer, means we can provide the highest-quality prescription eyewear together with optional extras - such as lens tints and performance enhancing lens coating technology for a fundamentally different wearer experience.



### **STYLE**

## We all want to look good

Prescription safety
eyewear that is high
performing, comfortable
and stylish means
employees will not only
want to wear their
designated safety eyewear,
but receive the same level
of protection as
colleagues, and protect
their personal glasses from
becoming damaged at
work.

## uvex Wearability

The key to compliance

### FIT.

### Find a frame that fits you best

uvex prescription safety spectacles are individually adapted to the wearer's vision while offering the best possible protection in the workplace. Head and facial shapes all differ requiring a range of prescription safety eyewear from which employees can select.

Adaptable features, such as nose bridges, extendable side arms and tight-fit kits, allow wearers to achieve the ultimate close fit (to keep hazards out) and find a position that means they can work comfortably, confidently and with as little distraction as possible.



### **COMFORT**

### Innovative features for comfortable protection

Decades of experience and innovative technologies form the basis for uvex products, which are manufactured in accordance with the most stringent safety standards. In addition to safety, uvex also guarantees maximum comfort and quality. Protective equipment that fits properly not only offers reliable protection, it is also more likely to be comfortable and therefore, worn by the employee.

Eyewear should deliver a low-pressure, lightweight fit with even weight distribution. Thanks to uvex's German-engineered dual-injection mould technology, we're able to combine soft and hard components into frames that flex; making them comfortable and durable, while also ensuring eyewear stays put.



### **PERFORMANCE**

### Product safety and performance

uvex prescription safety spectacles are certified and marked in accordance with EN 166, so they can be used in workplaces where safety spectacles are mandatory. As occupational safety spectacles, they not only protect the eyes (from UV radiation, flying particles, dust etc.), but are also a visual aid because the lenses have a dioptric effect.

The comprehensive uvex quality system guarantees the best design from an optical and processing technology perspective. All materials used (lenses, frames, cases etc.) are free from harmful substances and are regularly inspected.



#### STYL F


### Style meets comfort and safety meets design

We all want to look and feel good, even at work. When 'wearability' is designed into safety eyewear, employees are more likely to keep it where it should be, on their face and in front of their eyes. It is possible for employees to have high-performing, comfortable, properly fitted specs or goggles that keeps dust and debris out, in a style and design to ensure there is something for everyone.

The wide range of uvex styles and designs of safety eyewear allows you to find the product that most suits you.



uvex Prescription

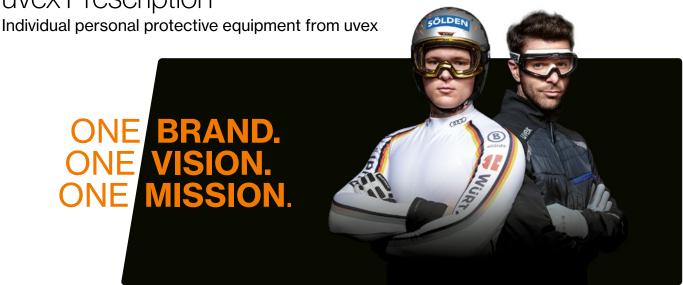

OUR MISSION

### #protecting people

The uvex brand mission.
This is our objective and our responsibility. uvex protects people – when working, playing sport and pursuing leisure activities.

Decades of experience enable us to transfer expertise continuously between the sectors of industrial safety and top-level sport, and provides the foundation on which we are able to continuously develop our products.

It allows us to create innovations and solutions based on advanced technologies that reliably protect people

 whether they are on a production line, on the ski slopes or on a mountain bike.

UR FUTI IBL

### Sustainable actions and social responsibility

If you rely on uvex, you are guaranteed sustainable actions. From environmental protection to social commitment: uvex puts corporate responsibility at the forefront of its daily business.

#### The focus of our commitment is to protect people:

- sustainable product concept
- avoidance of the use of hazardous substances beyond the requirements of the REACH regulation (the uvex banned hazardous substances list)
- uvex social standard for all manufacturing plants
- social commitment
   (e.g. Rainer Winter Foundation,
   Vision for the World)

### 'Made in uvex'

Decades of experience and innovative technologies form the basis for products that are manufactured in accordance with the most stringent safety standards.


Our individual personal protective equipment ensures that maximum levels of safety and comfort are provided.

Our innovations set new standards in quality and technology by combining excellent wearing comfort, attractive design and sophisticated functionality. Our motto 'Made in uvex' guarantees a comprehensive quality system and the best possible processing technology. All materials used are free from harmful substances and are regularly inspected.

uvex places great importance on a sustainable production concept with first-class products and an inhouse value creation chain, with a focus on production facilities in Germany and Europe. What's more, uvex offers maximum service with maximum flexibility.

## Contents

The vital companion for prescription safety spectacles

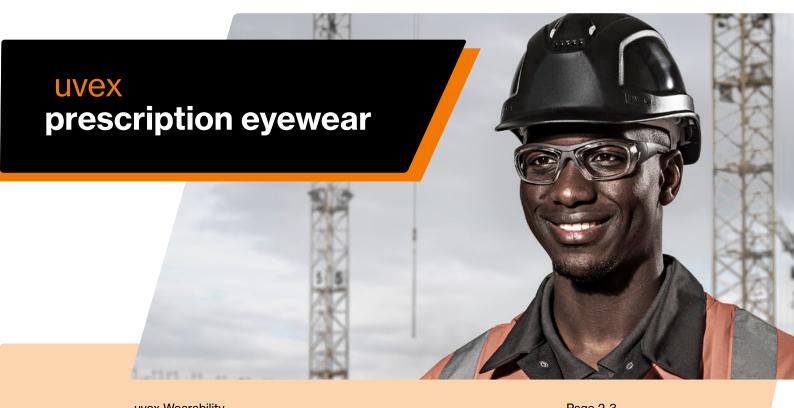

| uvex vvearability  | raye 2-3   |
|--|------------|
| uvex brand   | Page 4     |
| Contents   | Page 5     |
| uvex online ordering process                                 | Page 6-7   |
| Anti-reflective coating                                      | Page 8     |
| Lenses and finishes  | Page 9     |
| Optifog  | Page 10    |
| uvex anti-fog cloth  | Page 11    |
| uvex prescription safety frames                              | Page 12    |
| uvex basic collection metal prescription safety frames       | Page 13-14 |
| uvex basic collection plastic prescription safety frames     | Page 15    |
| uvex RX cd collection  | Page 16-19 |
| uvex RX sp collection  | Page 20-21 |
| uvex prescription safety inserts                             | Page 22    |
| uvex i-3 add safety spectacles                               | Page 23    |
| uvex prescription office/VDU spectacles                      | Page 24-26 |
| uvex prescription self-contained breathing apparatus eyewear | Page 27    |
| Certification and markings                                   | Page 28-29 |
| Lens prescription strength options                           | Page 30-37 |
| Multiple form request  | Page 38    |
|  |            |

## Online Ordering Process

Easier, faster and more seamless



- Generate a form quickly: for print or to be emailed to an employee
- Create and track the status of new prescription orders as they move through the manufacturing process: from when the Authorising Officer generates the form through to the order being despatched to the optician and finally invoiced
- · Review historical orders and run user reports

## The Optician's Portal

This is a great advantage to the flow and speed of the order process and will give employees a better experience when they visit the optician.

If an employee chooses a frame or a lens type which is not on your pre-approved list for selection. the optician can advise the employee straightaway. The employee will then have a choice to either choose something from the pre-approved list or to continue with the order.

If they choose the latter, uvex will seek approval as necessary. Orders will be placed on hold until approval is granted.

#### Once registered your Optician will be able to:



See the approved frames for your employees



Review and complete all fields to ensure timely processing



Submitted orders will go straight into production. Delays will only occur if there is a query with the order e.g. obtaining approval for non-standard items



Check the status of the order at any point once in production and advise the employee accordingly



Another advantage of the optician's portal is that uvex will be able to pay the optician for the dispensing and sight test fees by BACS payment, saving administration time and providing increased traceability.



For more information about the uvex prescription online ordering process, please visit uvex-safety.co.uk/prescription.

To speak to a member of our prescription team call 01252 725552 or email help-prescription@uvex.co.uk.

# Prescription safety spectacles

Frequently Asked Questions

### **Frequently Asked Questions (Wearers)**



Go to your Authorising Officer/Line Manager who will generate an online order or preprinted form and sign it. Then take this form to your chosen optician who will carry out an eye test and order your spectacles.



Your company may have chosen a designated optician to which you must go, this may well be printed on the form under "optician name". Your authorising officer will know and inform you if this is the case. If a designated optician has not been specified, then you can visit any optician of your choice. However, frames may not be available to try on.



Your company may have specified certain frames that they will allow you to wear. These will be on the form under "approved frames". If this is not the case, the complete range can be seen in this brochure from which your choice can be made. If a designated optician has been chosen, then sample frames will be available to try on.



Your optician can call uvex to order a sample frame. When this arrives, your optician will inform you that it has done so and will arrange a further appointment for you to try on the frame.



If you have your current eye prescription details you can take these to the optician along with the uvex form and the optician will complete the form with your details and order the spectacles as normal.



Provided your company pays for your eye test, uvex can arrange to pay the optician on your behalf and then invoice your company. This way, no money changes hands at the optician.

### **Frequently Asked Questions (Authorising officers)**



The opticians portal is a free elective service that an optician can quickly register for. Vision Express has transitioned on to the system with all stores going live in January 2019.

For example, Vision Express utilises the system in most of its stores, which helps order efficiency.



Forms are generated online or uvex can provide them free of charge with relevant information preprinted to ease the process. The Authorising Officer should complete the inside back cover of this brochure, scan and email or fax it back to uvex and we will do the rest. The more information your company can provide, the smoother the process will work.



uvex will provide your designated optician with the appropriate frames, allowing employees to try them on for style and fitting purposes. Frames need to be measured on the individual's face in order to achieve ocular precision. In addition, fees can be agreed providing consistent invoice levels.



Often the company Safety Officer or Occupational Health Nurse will make arrangements with a local optician. Alternatively a uvex representative can arrange this for you.




The form is quite straightforward and has all the required information on it. Generally there are no issues. However, if there are any queries, a phone call to our prescription department on 01252 725552, should solve any problems.



From the date of entering your details on to our computer we average between 7 and 10 working days before the spectacles are completed.

## Hard anti-reflective Coating

What are the benefits?



- We live in an environment with more and more light of different types, artificial light as well as natural light create annoying reflections
- Our future is filled with technologies which will make our lives even brighter...leading to a world full of reflections




- Reducing the reflections on a lens improves both vision and aesthetics.
- Standard lens material reflects around 8% of light, and polycarbonate material reflects approximately 10% of light.
- Enhancing the lens with an anti-reflective coating reduces reflections and increases the amount of light transmitted – resulting in clearer, sharper, crisper vision.

Glare caused by bright lights in poorly lit environments can be just as uncomfortable for a wearer as reflections caused by bright light.

## Typical situations that wearers experience reflections are:

- · When working under harsh indoor LED lighting,
- · Using a screen in a dimly lit office,
- · Reading indoors under harsh artificial light
- · When facing headlights of oncoming traffic,
- When a light source is over the wearers shoulder hitting the back surface of the lens
- · When using digital displays

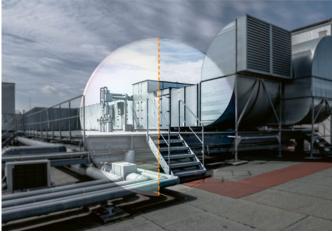

### Benefits of the anti-reflective lens treatment



Better transmission of visual information





of ghost images





Decrease of unwanted reflections



- Better Visual Clarity
- Improved Contrast
- Better Visual Comfort
- · Reduced Eye Strain
- Increased UV Protection
- Reduced glare at night time (poorly lit environments)

# Prescription safety spectacles Lenses and finishes

### Lenses

### Polycarbonate

- Mechanical strength 'F' (45 m/sec)
- Only partially chemical-resistant
- PC: Identification code: 2C-1.2 as per EN 170

### CR39, modified (plastic)

- Mechanical strength 'S' (ball drop test)
- Lightweight organic material suitable for chemicals and painting
- · Good scratch-resistance due to hard coating



### **Coatings**

### Scratch-resistant coating

To guarantee an ideal surface hardness, all our plastic lenses are given a hard coating.

### **Lens Tints**

### Tint

Tinted lenses provide effective protection against glare in areas with high light intensity (for example, sunlight)


### **Constant tinting**

- · Available in brown and grey
- Tinting levels: 82% (light), 38% (medium), 15% (dark)

#### **Variable tinting - Transitions**

- Lenses tint automatically, depending on the UV radiation and temperature
- Tinting of between approx. 8% and 80% in brown
- · Available with polycarbonate lens



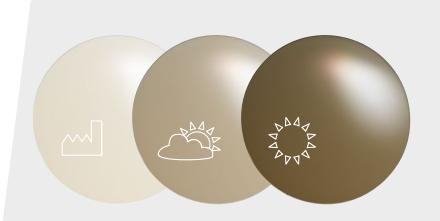



### The long-lasting anti-fog solution

Optifog's unique anti-fog system combines two patented technologies: Optifog lens treatment and a smart textile cloth with anti-fog molecules that activates the power of the Optifog lens. The Optifog lens treatment means both the front and back surfaces of the lens have integrated anti-fog technology. Simply wipe your lenses with the smart cloth and droplets that would usually obstruct your vision spread uniformly across the lens, in an invisible and fog-free layer.

## Optifog Benefits



# Fog repellence

Stays fog free even in extreme conditions\*



## Scratch resistant

Ensuring clear vision, guaranteed for 2 years



## UV protection

Protects your eyes from UVA and UVB rays



### Glare reduction

Less reflections for clarity of vision and improved aesthetics



### **Dust repellent**

Repels dust particles for clearer vision and easy to clean lenses

\*Internal laboratory test in extreme conditions: in cold conditions from 0 C to 23 C and in hot conditions, at 52 C for 15 seconds.

### How does it work?

**Every day:** Clean your Optifog lenses using the Optifog Smart Textile that comes with your new lenses.

**Every 2 weeks:** Wash your Optifog lenses with water. To avoid contamination, it is recommended to wash your glasses every time they get dirty or after they have potentially been exposed to infected agents.

Every 3 months (or after 450 activations): Renew your Optifog Smart Textile.

Before handling the Optifog Smart textile, it is recommended to wash your hands and spectacles to avoid any contamination.



# Anti-fog Solutions uvex anti-fog cloth



The uvex antifog cloth provides an ideal solution for those who wish to benefit from uvex's anti-fog technology as and when they need it. Simply wipe the cloth over your lenses and an ultra-thin layer of uvex's unique anti-fog formula is applied to the lens preventing them from misting up, resulting in streak-free, clear vision for hours.

The uvex antifog cloth can be used on any lens: prescription glasses, sunglasses, industrial and sports visors, goggles or screens, and is ideal for mask wearers. The uvex antifog cloths are individually wrapped and can be carried in a handbag, toolkit or in the glovebox so you can administer anti-fog protection whenever it's needed.

### For best results, we recommend to follow the instructions of use:



- · Clean the glasses beforehand
- Simply wipe both sides of the lens with the uvex antifog cloth using 5-10 circular motions
- Cleaning your glasses with a standard lens cloth will affect the anti-fog performance and will need reapplying



- Cost effective reusable up to 60 times
- Long-lasting 8 to 10 hours of anti-fog performance depending on environmental factors
- Easy to store in zip bag provided, ideal for a pocket, bag or tool box



- Less waste minimises waste compared to single use alternatives
- Reusable once its finished its lifecycle you can use it as a general cleaning cloth

## Prescription safety spectacles

Individual eye protection from uvex



uvex prescription safety spectacles are individually adapted to the wearer's vision while offering the best possible protection in the workplace.

The spectacles are certified and marked in accordance with EN 166, so they can be used in workplaces where safety spectacles are mandatory. As occupational safety spectacles, they not only protect the eyes (from UV radiation, flying particles, dust etc.), but are also a visual aid because the lenses have a dioptric effect.

uvex offers a wide range of high-quality lens materials, focus types and frames. This makes it easier to switch between personal spectacles and employer-provided safety spectacles, which increases wearer acceptance.

The comprehensive uvex quality system guarantees the best design from an optical and processing technology perspective. All materials used (lenses, frames, cases etc.) are free from harmful substances and are regularly inspected.

### The collection

uvex offers a variety of frames for prescription safety spectacles, see pages 13-23.

## uvex RX Basic collection in metal



 In different shapes, sizes and colours Pages 13-14

## uvex RX Basic collection in plastic



In different shapes and sizes
 Page 15

### uvex RX cd



 Safety spectacles in sporty designs Pages 16-19

### uvex RX sp



• Safety spectacles in a wrap-around design Pages 20-21

### uvex prescription inserts



• Goggle inserts for individual prescriptions Page 22

### uvex i-3 add



 Invisible integrated dioptre correction for near vision
 Page 23

# Prescription safety spectacles Basic collection metal frames









### uvex RX 5102

- Fashionable, aviator-style metal frame
- Transparent side shields
- Anatomically adjustable nose bridge and ear-pieces ensure an exceptional fit
- For prescription availability, please refer the options shown on pages 30 and 31

| uvex RX 5102     |                 |
|------------------|-----------------|
| Product Code     | 6109101         |
| Ref. no.         | 5102 1400 53/20 |
| Frame eye size   | 53 mm           |
| Bridge width     | 20 mm           |
| Colour           | gunmetal, matt  |
| Marking on frame | W 166 FT CE     |

### uvex RX 5106

- · Classic design metal frame
- Transparent side shields
- Anatomically adjustable nose bridge and ear-pieces ensure an exceptional fit
- For prescription availability, please refer the options shown on pages 30 and 31

| uvex RX 5106     |                 |
|------------------|-----------------|
| Product Code     | 6109109         |
| Ref. no.         | 5106 1400 52/20 |
| Frame eye size   | 52 mm           |
| Bridge width     | 20 mm           |
| Colour           | gunmetal, matt  |
| Marking on frame | W 166 FT CE     |

### uvex RX 5108

- · Slim, expressive metal frame
- Transparent side shields
- Anatomically adjustable nose bridge and ear-pieces ensure an exceptional fit
- For prescription availability, please refer the options shown on pages 30 and 31

| uvex RX 5108     |                 |
|------------------|-----------------|
| Product Code     | 6109113         |
| Ref. no.         | 5108 3400 56/19 |
| Frame eye size   | 56 mm           |
| Bridge width     | 19 mm           |
| Colour           | steel blue      |
| Marking on frame | W 166 FT CE     |
|                  |                 |

### uvex RX 5101

- · Classic design metal frame with double bridge
- Side shields made of wire mesh for good air circulation
- Anatomically adjustable nose pads
- Arms with sprung hinges and easily adjustable earpieces
- For prescription availability, please refer the options shown on pages 30 and 31

| 6109103         |
|-----------------|
| 5101 1018 56/17 |
| 56 mm           |
| 17 mm           |
| black, silver   |
| W 166 FT CE     |
|                 |









### uvex RX 5109

- Modern, rounded metal frameTransparent side shields
- · Anatomically adjustable nose pads and ear-pieces ensure an exceptional fit
- For prescription availability, please refer the options shown on pages 30 and 31

| uvex RX 5109     |                 |
|------------------|-----------------|
|                  |                 |
| Product Code     | 6109114         |
| Ref. no.         | 5109 6100 50/19 |
| Frame eye size   | 50 mm           |
| Bridge width     | 19 mm           |
| Colour           | gold            |
| Marking on frame | W 166 FT CE     |

### **uvex RX 5110**

- · Classic, square metal frame
- Transparent side shields
- Anatomically adjustable nose pads and ear-pieces ensure an exceptional fit
- For prescription availability, please refer the options shown on pages 30 and 31

| uvex RX 5110        |                 |  |
|---------------------|-----------------|--|
| <b>Product Code</b> | 6109115         |  |
| Ref. no.            | 5110 1300 55/17 |  |
| Frame eye size      | 55 mm           |  |
| Bridge width        | 17 mm           |  |
| Colour              | anthracite      |  |
| Marking on frame    | W 166 FT CE     |  |
|                     |                 |  |

### **uvex RX 5111**

- · Large metal frame in a retro design featuring a double bridge
- Transparent side shields
- Anatomically adjustable nose pads and ear-pieces ensure an exceptional fit
- For prescription availability, please refer the options shown on pages 30 and 31

| uvex RX 5111        |                 |  |
|---------------------|-----------------|--|
| <b>Product Code</b> | 6109116         |  |
| Ref. no.            | 5111 1800 57/19 |  |
| Frame eye size      | 57 mm           |  |
| Bridge width        | 19 mm           |  |
| Colour              | silver          |  |
| Marking on frame    | W 166 FT CE     |  |



# Prescription safety spectacles

Basic collection plastic frames



6108215



### uvex RX 5502

- · Close-fitting plastic frames
- Side shields and integrated brow guard frame design
- Specially shaped frames provide protection against particles from below
   Good fit with anatomically shaped nose bridge
- · Individually adjustable side arms with four different lengths and adjustable soft-form comfort ear pieces
- For prescription availability, please refer the options shown on pages 30 and 31

| uvex RX 5502     |                 |
|------------------|-----------------|
| Product Code     | 6108215         |
| Ref. no.         | 5502 1725 56/15 |
| Frame eye size   | 56 mm           |
| Bridge width     | 15 mm           |
| Colour           | grey            |
| Marking on frame | W 166 F CE      |

### uvex RX 5506

- Comfortable plastic frame
- Side shields and integrated brow guard frame design
- Good fit with anatomically shaped nose bridge
   For prescription availability, please refer the options shown on pages 30 and 31

| uvex RX 5506     |                         |  |
|------------------|-------------------------|--|
| Product Code     | 6109210                 |  |
| Ref. no.         | 5506 1725 56/18         |  |
| Frame eye size   | 56 mm                   |  |
| Bridge width     | 18 mm                   |  |
| Colour           | light grey, translucent |  |
| Marking on frame | W 166 F CE              |  |

# Prescription safety spectacles uvex RX cd



### **uvex RX cd 5518**

- Sporty frame design: attractive and durable
- Metal-free
- Comfortable soft arms (uvex duo component technology), non-slip fit without pressure points
- Good fit thanks to anatomically shaped nose bridge
- $\bullet$  For prescription availability, please refer the options shown on pages 32 and 33

| uvex RX cd 5518  |                 |                   |                  |
|------------------|-----------------|-------------------|------------------|
| Product Code     | 6109230*        | 6109231*          | 6109234*         |
| Ref. no.         | 5518 1341 54/22 | 5518 5074 54/22   | 5518 1333 54/22  |
| Frame eye size   | 54 mm           | 54 mm             | 54 mm            |
| Bridge width     | 22 mm           | 22 mm             | 22 mm            |
| Colour           | anthracite, red | dark brown, green | anthracite, blue |
| Marking on frame | W 166 F CE      | W 166 F CE        | W 166 F CE       |








- Contemporary plastic frame in stylish colours
- Good fit thanks to anatomically shaped nose bridge
- Translucent lens frame for an unobstructed field of view
- uvex Comfort Sliders allow the side arm length and inclination to be adjusted for a customised fit
- The spectacles can also be worn without uvex Comfort Sliders
- · Completely metal-free
- $\bullet$  For prescription availability, please refer the options shown on pages 32 and 33

| uvex RX cd 5520  |                  |                  |
|------------------|------------------|------------------|
| Product Code     | 6109236*         | 6109246*         |
| Ref. no.         | 5520 1333 54/18  | 5520 1344 54/18  |
| Frame eye size   | 54 mm            | 54 mm            |
| Bridge width     | 18 mm            | 18 mm            |
| Colour           | anthracite, blue | anthracite, pink |
| Marking on frame | W 166 F CE       | W 166 F CE       |

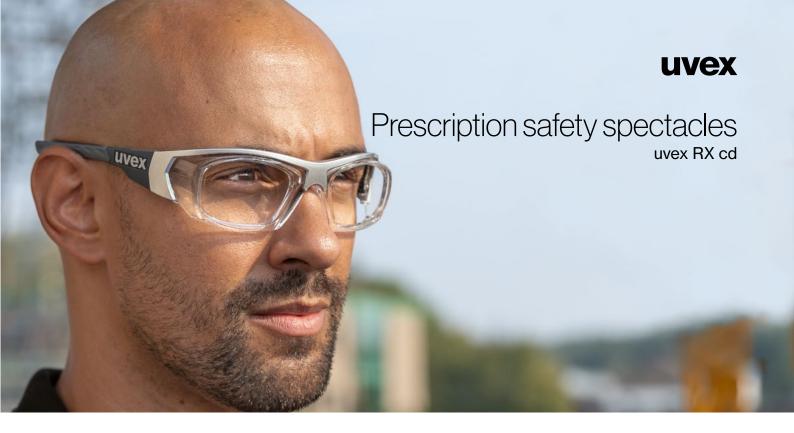



6109249



Reflective uvex logo

### **uvex RX cd 5521**

- · Stylish plastic frame with reflective uvex logo
- Transparent lens frame for an unrestricted field of view
- Good fit thanks to anatomically shaped nose bridge
- Sporty arms made from a combination of soft and hard components to ensure increased comfort and non-slip fit
- $\bullet$  For prescription availability, please refer the options shown on pages 32 and 33

| uvex RX cd 5521  |                    |
|------------------|--------------------|
| Product Code     | 6109249*           |
| Ref. no.         | 5521 1813 54/22    |
| Frame eye size   | 54 mm              |
| Bridge width     | 22 mm              |
| Colour           | silver, anthracite |
| Marking on frame | W 166 F CE         |
|                  |                    |





- Close-fitting plastic frame
- Transparent side shields and integrated brow guard frame design
- Soft, adjustable nose bridge
- Easily adjustable soft-form comfort ear pieces
- For prescription availability, please refer the options shown on pages 32 and 33

| uvex RX cd 5514  |                 |                 |  |
|------------------|-----------------|-----------------|--|
| Product Code     | 6109225*        | 6109226*        |  |
| Ref. no.         | 5514 1033 53/18 | 5514 1045 55/18 |  |
| Frame eye size   | 53 mm           | 55 mm           |  |
| Bridge width     | 18 mm           | 18 mm           |  |
| Colour           | black, blue     | black, red      |  |
| Marking on frame | W 166 F CE      | W 166 F CE      |  |







- Modern plastic frame in a robust design
- Translucent frame colour for an unobstructed field of vision
- Air vents at the top and side
- Soft, adjustable nose bridge
- Sporty arms made from a combination of soft and hard components to ensure increased comfort and non-slip fit
- · Soft, adjustable ear-pieces with metal core
- Supplied with uvex tight-fit-kit consisting of headband and foam seal (protection against liquid droplets – marking 3, in accordance with EN 166)
- $\bullet$  For prescription availability, please refer the options shown on pages 32 and 33

| uvex RX cd 5522  |                        |
|------------------|------------------------|
| Product Code     | 6109250                |
| Ref. no.         | 5522 2533 58/15        |
| Frame eye size   | 58 mm                  |
| Bridge width     | 15 mm                  |
| Colour           | translucent grey, blue |
| Marking on frame | W 166 F CE             |

# Prescription safety spectacles



### **uvex RX cd 5515**

- Close-fitting plastic frame
- Side shields and integrated brow guard frame design
- Soft, adjustable nose bridge
- Easily adjustable soft-form comfort ear pieces
- For prescription availability, please refer the options shown on pages 32 and 33

| uvex RX cd 5515  |                   |                    |                      |
|------------------|-------------------|--------------------|----------------------|
| Product Code     | 6109227           | 6109228*           | 6109229*             |
| Ref. no.         | 5515 1347 51/17   | 5515 1371 53/17    | 5515 1342 57/17      |
| Frame eye size   | 51 mm             | 53 mm              | 57 mm                |
| Bridge width     | 17 mm             | 17 mm              | 17 mm                |
| Colour           | anthracite, coral | anthracite, petrol | anthracite, dark red |
| Marking on frame | W 166 F CE        | W 166 F CE         | W 166 F CE           |
|                  |                   |                    |                      |








uvex RX cd 5505 with uvex RX cd seal

- · Close-fitting plastic frames
- Integrated side shields and brow guard for an exceptionally close fit
- Specially shaped frames provide protection against particles from below
- · Good fit with anatomically shaped nose bridge
- Individually adjustable side arm length and angle for a customised fit and adjustable soft-form comfort ear pieces
- Comes with foam seal frame for use when working with dust, chips or fluids. Complies with EN 166 "Protection against liquid droplets and splashes" (category "3")
- $\bullet$  For prescription availability, please refer the options shown on pages 32 and 33

| uvex RX cd 5505  |                 |                 |
|------------------|-----------------|-----------------|
| Product Code     | 6109208         | 6109209         |
| Ref. no.         | 5505 2900 55/19 | 5505 2900 57/19 |
| Frame eye size   | 55 mm           | 57 mm           |
| Bridge width     | 19 mm           | 19 mm           |
| Colour           | transparent     | transparent     |
| Marking on frame | W 166 F CE      | W 166 F CE      |

### uvex RX sp Lifestyle at work

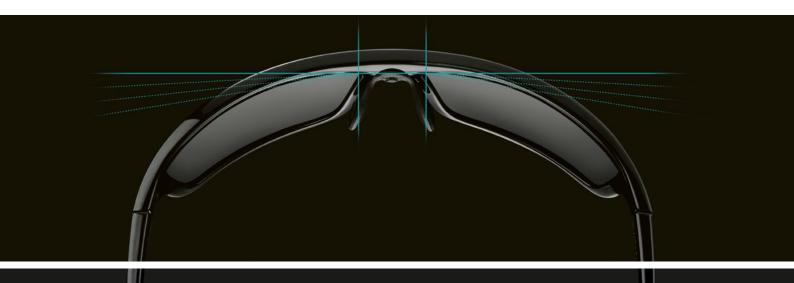


### uvex RX sp frames

Make a statement with the uvex RX sp collection which stands out due to its sporty design and appealing frame colour combinations. All protection functions are fully integrated into the frame design requiring no separate side guards which is commonly the case with conventional protective


The wraparound design offers the perfect fit and maximum protection thanks to its wide side arms and curvature of the lens. As with all uvex models, only the highest quality plastics are used in its protection.

### uvex wrap lenses

We use lenses on an 8 base to match the curvature of the frame (5512 & 5513).



Conventional prescription glasses: The planes of the right and left ler virtually congruent.





### **uvex RX sp 5513**

- sporty, plastic "wraparound" design with uvex wrap lenses
- side shield and integrated brow guard frame design
- · good fit due to anatomically shaped soft nose bridge
- sporty arms with a combination of soft and hard components ensure increased comfort and non-slip fit
- For prescription availability, please refer the options shown on pages 34 and 35

uvex RX sp 5513 6109222 5513 1577 62/16 **Product Code** Ref. no. Frame eye size 62 mm Bridge width 16 mm Colour grey, light green Marking on frame

# Prescription safety spectacles









### uvex RX sp 5510

- Sporty, plastic "wraparound" design
- · Side shield and integrated brow guard frame design
- · Good fit with anatomically shaped soft nose bridge
- Sporty arms with a combination of soft and hard components ensure increased comfort and non-slip fit
- $\bullet$  For prescription availability, please refer the options shown on pages 36 and 37

| uvex RX sp 5510  |                        |                    |
|------------------|------------------------|--------------------|
| Product Code     | 6109216                | 6109217            |
| Ref. no.         | 5510 1217 62/17        | 5510 1248 62/17    |
| Frame eye size   | 62 mm                  | 62 mm              |
| Bridge width     | 17 mm                  | 17 mm              |
| Colour           | matt black, light grey | matt black, orange |
| Marking on frame | W 166 F CE             | W 166 F CE         |

### **uvex RX sp 5512**

- Sporty, plastic "wraparound" design with uvex wrap lenses
- · Supplied with uvex tight-fit-kit consisting of headband and foam seal
- Side shield and integrated brow guard frame design
- The arms can be replaced with a headband for a more secure fit when working in extreme conditions
- The foam seal guarantees a close and firm fit.
- Very good fit with anatomically adjustable, soft nose bridge
- Sporty side arms with a combination of soft and hard components ensure increased comfort and non-slip fit
- For prescription availability, please refer the options shown on pages 34 and 35

Applications in combination with the tight-fit-kit:

- Working in extreme situations, such as overhead or in confined spaces
- Working with fluids (drops) or chips and dust
- Complies with EN 166 "Protection against liquid droplets and splashes" (category "3")

#### Note

Only available in a Polycarbonate Wrap Single Vision or Varifocal lens type (compensated Rx).

We cannot supply Bifocals, Transitions or Prism, nor can we supply in CR39 lens material, only Polycarbonate.

| uvex RX sp 5512     |                 |                    |
|---------------------|-----------------|--------------------|
| <b>Product Code</b> | 6109220         | 6109221            |
| Ref. no.            | 5512 5573 65/16 | 5512 1348 65/16    |
| Frame eye size      | 65 mm           | 65 mm              |
| Bridge width        | 16 mm           | 16 mm              |
| Colour              | brown, olive    | anthracite, orange |
| Marking on frame    | W 166 F CE      | W 166 F CE         |





6109220 assembled with uvex tight-fit-kit





6109221 assembled with uvex tight-fit-kit

## Prescription safety inserts

uvex skyguard NT RX · uvex carbonvision RX

When a standard prescription safety frame does not give the full protection against chemical and liquid splash or dust particles; or the risk assessment specifies a goggle – uvex has the solution.


- Prescription insert fitted securely behind the goggle lens
- · Both products include optimum non-allergenic seals
- The uvex skyguard NT RX features fully adjustable side arms offering low energy impact protection and enables the wearer to achieve an individual fit. Whereas, the uvex carbonvision RX goggle has a wide, adjustable elasticated headband
- · Both products feature uvex's permanent anti-fog coating on the inside of the lens and a scratch resistant coating on the outside



### uvex skyguard NT RX 5500

- The uvex skyguard NT prescription insert comes as a complete unit and offers wear protection against large dust particles and liquid splash
- Combining high-tech hard and soft materials the spectacle creates a soft effective seal around the eyes which is easy to clean
- The side arms can the adjusted for a secure, comfortable fit
- The uvex skyguard NT is a close fitting, wraparound spec for unhindered vision
- Permanent uvex anti-fog lens coating on the inside, scratch resistant on the outside - Anti-fog coating does not come as standard on the prescription lenses in the insert. This is a separate request and incurs a surcharge
- The seal and prescription insert can easily be replaced
- For prescription availability, please refer the options shown on pages 30 and 31

| uvex skyguard NT RX 5500 |                |
|--------------------------|----------------|
| Product Code             | 6108200        |
| RX insert lens diameter  | 48 mm          |
| RX insert bridge width   | 20 mm          |
| Colour                   | blue, grey     |
| Marking on frame         | W 166 34 F CE  |
| Lenses                   | PC clear       |
| Lens marking             | 2C-1,2 W 1 FKN |

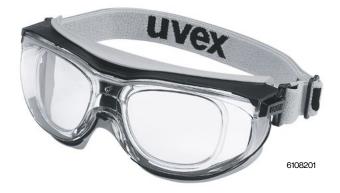

### uvex carbonvision RX 5501

- The ideal choice when you require the protection level of goggle and the lowest profile of size and weight in one product
- This close fitting goggle is supplied with the uvex supravision extreme, permanent anti-fog coating on the inside, scratch resistant on the outside - Anti-fog coating does not come as standard on the prescription lenses in the insert. This is a separate request and incurs a surcharge
- Comes as a complete unit and offers wearer protection against large dust particles and liquid splash
- · Easy to fit
- Provides absolute comfort with no leakage to the goggle seal due to the lack of side arms
- Combines high-tech hard and soft materials creating a soft effective seal around the eyes which is easy to clean
- For prescription availability, please refer the options shown on pages 30 and 31

| uvex carbonvision RX 5501 |                |
|---------------------------|----------------|
| Product Code              | 6108201        |
| RX insert lens diameter   | 48 mm          |
| RX insert bridge width    | 20 mm          |
| Colour                    | black, grey    |
| Marking on frame          | W 166 34 B CE  |
| Lenses                    | PC clear       |
| Lens marking              | 2C-1.2 W 1 FKN |

## uvex i-3 add

### Reliable protection and optimum wearer comfort

## Optimum protective eyewear means improved, safe vision.

uvex i-3 add safety spectacles have invisible integrated dioptre correction for near vision. Strain on the eyes is effectively reduced (e.g. when reading) and the patented lens technology ensures an instant high level of compatibility for wearers. At the same time, the uvex i-3 add spectacles provide secure protection and optimal comfort.



### Variable side arm inclination


The 5-position side arm inclination allows individual adjustment and optimum coverage of the eyes.



#### Addition

Two models are available for individualised correction of near vision. (+1.0 dpt. and +2.0 dpt.)



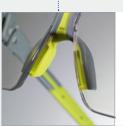

### Flexible nose loops


The extremely soft adjustable Softflex nose loops ensure a secure fit and can be individually adapted to sit comfortably on the nose.

### uvex supravision excellence

The uvex supravision excellence coating guarantees extreme scratch resistance on the outside and permanent anti-fogging properties on the inside.




Patent no.: DE 10 2012 207 384



The patented lens technology makes it possible to integrate two progression zones for near vision on the inside of the duospherical single lens safety spectacles. The correction strength at the bottom of the lenses is +1.0 or +2.0, depending on the model. A distinctive feature and unique selling point is that the patented manufacturing technology means the front area and consequently the base curve of the lenses are not altered

This combines extremely good coverage and fit, all the way to the edge, together with the benefits of a progressive lens on the inside area. A further benefit is that the progressive zone is not visible and that these spectacles comply with all standards of EN norms that are relevant to safety.





## optical lens designed by optisiviss

#### **Progression zones**

This diagram of the lenses shows the large zone that does not feature any optical correction. The transparent, integrated optical correction starts in the region of the middle and the strength increases gradually towards the lower edge of the lenses. The correction strength of the spectacles is +1.0 or +2.0, depending on the model.

The free-form lens is manufactured in accordance with standard parameters and

The free-form lens is manufactured in accordance with standard parameters and designed for a distance of approximately 64 mm between the eyes. These safety spectacles do not permanently replace prescription safety spectacles.

### uvex i-3 add

|            | uvex i-3 add 1.0            | uvex i-3 add 2.0            |
|------------|-----------------------------|-----------------------------|
| Art. no.   | 6108210                     | 6108211                     |
| Frame      | anthracite, lime            | anthracite, lime            |
|            | W 166 FT CE                 | W 166 FT CE                 |
| Lens       | PC clear                    | PC clear                    |
|            | UV 400                      | UV 400                      |
|            | 2C-1.2 W 1 FTKN CE          | 2C-1.2 W 1 FTKN CE          |
|            | uvex supravision excellence | uvex supravision excellence |
| Strength   | 1.0 dpt.                    | 2.0 dpt.                    |
| Order unit | PC                          | PC                          |



## **VDU** spectacles

Individual eye protection at the screen



uvex VDU spectacles are specially designed for working at a screen, enabling problem-free vision at a computer workstation.

The special feature of VDU spectacles is the distance for which they have been optimised. Normally, the lens is designed for a viewing distance of approximately 30 cm (reading distance) to correct presbyopia. A screen is usually about 50 cm – 80 cm away from the human eye.

To be able to focus continuously at different distances, spectacle wearers are forced to adopt an unnatural head position and body posture. This can lead to a variety of posture-related symptoms, such as overexertion of

the shoulder and neck muscles, fatigue symptoms or headaches. For most people who wear reading glasses or varifocals in their everyday lives, VDU spectacles are recommended if the main activity in their job requires viewing a computer screen and safety spectacles are not mandatory in the workplace.

uvex offers different lens materials, focus types and frames for VDU spectacles. The 'Made in uvex' quality system guarantees the best design from an optical and processing technology perspective. All materials used are free from harmful substances and are regularly inspected.


### The collection

uvex offers different frames for VDU spectacles. Numerous models are available as metal or plastic frames. See pages 25-26.

#### **Metal frames**

### Plastic frames









## VDU Spectacles Metal frames

Prescription range for VDU spectacles can be found on pages 30 and 31, but only available with CR39, 1.6 and 1.67 lens types.













|                | uvex 3112       | uvex 3107       | uvex 3108       | uvex 3116       | uvex 3117       | uvex 3118       |
|----------------|-----------------|-----------------|-----------------|-----------------|-----------------|-----------------|
| Product code   | 6110050         | 6110033         | 6110034         | 6110054         | 6110055         | 6110056         |
| Ref. no.       | 3112 1233 54/17 | 3107 1000 55/17 | 3108 1400 54/18 | 3116 5500 53/17 | 3117 1590 48/20 | 3118 7190 55/17 |
| Frame eye size | 54 mm           | 55 mm           | 54 mm           | 53 mm           | 48 mm           | 55 mm           |
| Bridge width   | 17 mm           | 17 mm           | 18 mm           | 17 mm           | 20 mm           | 17 mm           |
| Colour         | black, blue     | black           | gun             | brown           | grey, vintage   | petrol, vintage |
|                |                 |                 | •               |                 |                 |                 |

# VDU Spectacles Plastic and Nylor frames



uvex 3510
Product code
Ref. no. 6110046 3510 1025 52/17 Frame eye size Bridge width Colour 52 mm 17 mm black, translucent

### **Metal Nylor Frame**



uvex 2104 6110024 2104 1900 54/18 54 mm Product code Ref. no.
Frame eye size
Bridge width 18 mm Colour silver, matt

## uvex Prescription Spectacles

For use with self-contained breathing apparatus (BA)

Prescription range for uvex BA inserts can be found on pages 30 and 31, but only available with CR39, 1.6 and 1.67 lens types.





### uvex 9000

- For use with Sabre and Kemira respirator mask
- With short side arms this frame clips into slots moulded into the respirator

| uvex 9000      |        |  |
|----------------|--------|--|
| Colour.        | Silver |  |
| Frame eye size | 53 mm  |  |
| Bridge width   | 18 mm  |  |
|                |        |  |

Available with CR39

### uvex 9100

- · Suitable for all respirators
- Thin metal side arms to fit close to the head to ensure little or no leakage when wearing a full face respirator

| uvex 9100      |        |
|----------------|--------|
| Colour         | Silver |
| Frame eye size | 44 mm  |
| Bridge width   | 22 mm  |

Available with CR39





### uvex 9250

- For use with Kemira, Interspiro respirator mask
- Designed to fit inside a fill face respirator which can be easily adjusted

| uvex 9250      |        |
|----------------|--------|
| Colour         | Silver |
| Frame eye size | 50 mm  |
| Bridge width   | 20 mm  |

Available with CR39

### uvex 9255

- For use with Draeger Panorama respirator mask
- Fits in to mask with vertical adjustment
- Insert for Draeger Futura also available

| uvex 9255      |        |
|----------------|--------|
| Colour         | Silver |
| Frame eye size | 49 mm  |
| Bridge width   | 18 mm  |

Available with CR39

## Prescription safety spectacles


### Certification and marking

### Certification

Individually manufactured uvex prescription safety spectacles are tested and certified by independent testing institutes at regular intervals according to the requirements of EN 166.



### Marking of lenses in accordance with EN 166

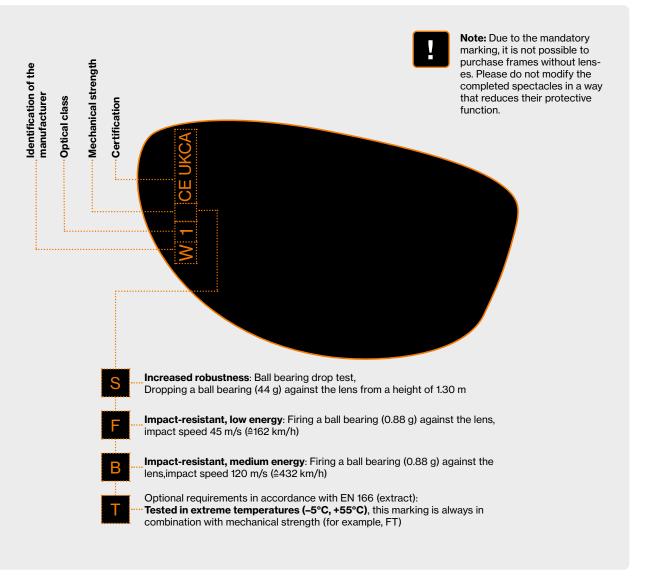




# Prescription safety spectacles Certification and marking

### Marking

- Frame and lenses are permanently marked
- If the markings on the lens and frame are different, the lower mechanical strength applies to the entire eye protection device
- According to the PPE regulation, uvex prescription safety spectacles must be marked with the factory symbol and production date: MM/YYYY



### Marking of the frame in accordance with EN 166

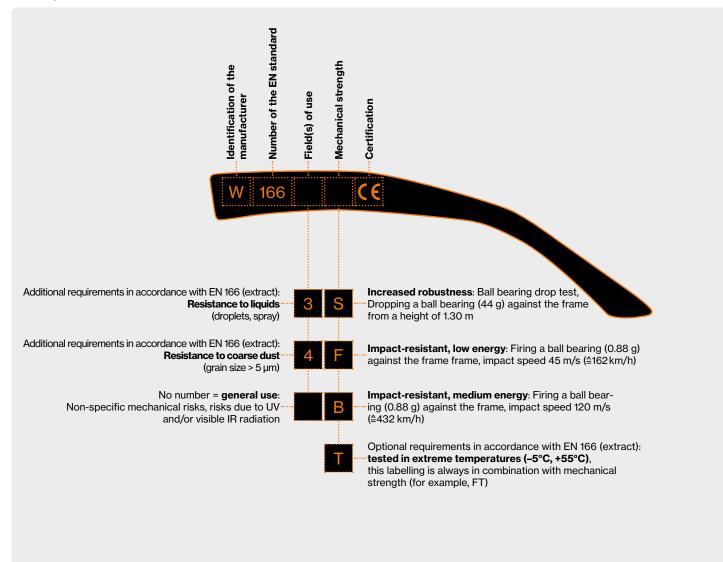

## Lens Options

### For plastic and metal frames

uvex basic collection models: 5101, 5102, 5106, 5108, 5109, 5110, 5111, 5502, 5506, uvex skyguard NT and uvex carbonvision

| Lens Type   | Parameter for centering lenses | Material  |   |  |
|---|--------------------------------|---|---|--|
| Description   | Maximum Height (Box Measure)   | CR39  | CR39 1.6  |  |
| SINGLE VISION:<br>Certified and available prescription range        | As required                    | +10.00 to -10.00 at maximum value. Cyl 6.00 dpt.            | +8.00 to -10.00 at maximum value. Cyl 6.00 dpt.           |  |
| BIFOCAL D28:<br>Certified and available prescription range          | As required                    | +7.00 to -8.00 at maximum value.<br>Cyl 4.00 dpt. Add +3.00 | Not available   |  |
| VARIFOCAL QUADRO: Certified and available prescription range        | Min: 18mm                      | +6.00 to -10.00 at maximum value. Cyl 6.00 dpt. Add +3.00   | +6.00 to -10.00 at maximum value. Cyl 4.00 dpt. Add +3.00 |  |
| VARIFOCAL QUADRO MINI:<br>Certified Prescription Range              | Min: 14mm                      | +6.00 to -10.00 at maximum value. Cyl 6.00 dpt. Add +3.00   | +6.00 to -10.00 at maximum value. Cyl 4.00 dpt. Add +3.00 |  |
| VARIFOCAL COMFORT MAX: Certified Prescription Range                 | Min: 17mm                      | +6.00 to -10.00 at maximum value. Cyl 6.00 dpt. Add +3.00   | +8.00 to -12.00 at maximum value. Cyl 6.00 dpt. Add +3.00 |  |
| VARIFOCAL COMFORT SHORT: Certified Prescription Range               | Min: 14mm                      | +6.00 to -10.00 at maximum value. Cyl 6.00 dpt. Add +3.00   | +8.00 to -12.00 at maximum value. Cyl 6.00 dpt. Add +3.00 |  |
| VARIFOCAL PHYSIO 3:<br>Certified Prescription Range                 | Min: 17mm                      | +6.00 to -10.00 at maximum value. Cyl 6.00 dpt. Add +3.00   | +8.00 to -12.00 at maximum value. Cyl 6.00 dpt. Add +3.00 |  |
| VARIFOCAL PHYSIO 3 SHORT:<br>Certified Prescription Range           | Min: 14mm                      | +6.00 to -10.00 at maximum value. Cyl 6.00 dpt. Add +3.00   | +8.00 to -12.00 at maximum value. Cyl 6.00 dpt. Add +3.00 |  |
| INTERVIEW 0.80 (Occupational Lens):<br>Certified Prescription Range | n/a                            | +5.00 to -3.00 at maximum value.<br>Cyl +/- 2.00 dpt.       | Not available   |  |
| INTERVIEW 1.30 (Occupational Lens):<br>Certified Prescription Range | n/a                            | +5.00 to -3.00 at maximum value.<br>Cyl +/- 2.00 dpt.       | Not available   |  |
| ACCESS 0.75 (Occupational Lens):<br>Certified Prescription Range    | n/a                            | +6.00 to -6.00 at maximum value. Cyl 4.00 dpt.              | Not available   |  |
| ACCESS 1.25 (Occupational Lens):<br>Certified Prescription Range    | n/a                            | +6.00 to -6.00 at maximum value. Cyl 4.00 dpt.              | Not available   |  |
| COMPUTER 2V (Occupational Lens):<br>Certified Prescription Range    | n/a                            | +7.00 to -6.00 at maximum value.<br>Cyl 4.00 dpt.           | Not available   |  |
| COMPUTER 3V (Occupational Lens):<br>Certified Prescription Range    | n/a                            | +6.00 to -7.50 at maximum value.<br>Cyl 6.00 dpt.           | Not available   |  |



► The overview shows the maximum prescription range which is approved and certified. Depending on the size of the frame and the lens material and various other measurements, further restrictions may apply.

\*\*Maximum prism on all lenses is 3.00\*\*

|  |   | Optional Extras |      |         |   |  |
|--|---|-----------------|------|---------|---|--|
| CR39 1.67  | Poly  | AR<br>Coating   | Tint | Optifog | Transitions Brown   |  |
| +8.00 to -14.50 at maximum<br>value. Cyl 6.00 dpt.         | +8.00 to -10.00 at maximum value. Cyl 6.00 dpt.           | Yes             | Yes  | Yes     | +7.50 to -8.00 at maximum value. Cyl 6.00 dpt.            |  |
| Not available  | +9.50 to -10.00 at maximum value. Cyl 4.00 dpt. Add +3.00 | Yes             | Yes  | No      | Not available   |  |
| +8.00 to -12.00 at maximum value. Cyl 4.00 dpt. Add +3.00  | +9.50 to -10.00 at maximum value. Cyl 6.00 dpt. Add +3.00 | Yes             | Yes  | No      | Not available   |  |
| +8.00 to -12.00 at maximum value. Cyl 4.00 dpt. Add +3.00  | +9.50 to -10.00 at maximum value. Cyl 6.00 dpt. Add +3.00 | Yes             | Yes  | No      | Not available   |  |
| +10.00 to -12.00 at maximum value. Cyl 6.00 dpt. Add +3.00 | +6.00 to -10.00 at maximum value. Cyl 6.00 dpt. Add +3.00 | Yes             | Yes  | Yes     | +6.00 to -10.00 at maximum value. Cyl 6.00 dpt. Add +3.00 |  |
| +10.00 to -12.00 at maximum value. Cyl 6.00 dpt. Add +3.00 | +6.00 to -10.00 at maximum value. Cyl 6.00 dpt. Add +3.00 | Yes             | Yes  | Yes     | +6.00 to -10.00 at maximum value. Cyl 6.00 dpt. Add +3.00 |  |
| +9.00 to -12.00 at maximum value. Cyl 6.00 dpt. Add +3.00  | +6.00 to -10.00 at maximum value. Cyl 6.00 dpt. Add +3.00 | Yes             | Yes  | Yes     | Not available   |  |
| +9.00 to -12.00 at maximum value. Cyl 6.00 dpt. Add +3.00  | +6.00 to -10.00 at maximum value. Cyl 6.00 dpt. Add +3.00 | Yes             | Yes  | Yes     | Not available   |  |
| Not available  | Not available   | Yes             | Yes  | No      | Not available   |  |
| Not available  | Not available   | Yes             | Yes  | No      | Not available   |  |
| Not available  | Not available   | Yes             | Yes  | Yes     | Not available   |  |
| Not available  | Not available   | Yes             | Yes  | Yes     | Not available   |  |
| Not available  | Not available   | Yes             | Yes  | Yes     | Not available   |  |
| Not available  | Not available   | Yes             | Yes  | Yes     | Not available   |  |

## Lens Options

For uvex RX cd frame collection:

5505, 5514, 5515, 5518, 5520, 5521, 5522

| Lens Type   | Parameter for centering lenses | Material   |  |  |
|---|--------------------------------|--|--|--|
| Description   | Maximum Height (Box Measure)   | CR39   | CR39 1.6   |  |
| SINGLE VISION:<br>Certified and available prescription range        | As required                    | +6.00 to -6.00 at maximum value. Cyl 4.00 dpt.           | +6.00 to -6.00 at maximum value. Cyl 4.00 dpt.           |  |
| BIFOCAL D28:<br>Certified and available prescription range          | As required                    | +6.00 to -6.00 at maximum value. Cyl 4.00 dpt. Add +3.00 | Not available  |  |
| VARIFOCAL QUADRO:<br>Certified and available prescription range     | Min: 18mm                      | +6.00 to -6.00 at maximum value. Cyl 4.00 dpt. Add +3.00 | +6.00 to -6.00 at maximum value. Cyl 4.00 dpt. Add +3.00 |  |
| VARIFOCAL QUADRO MINI:<br>Certified Prescription Range              | Min: 14mm                      | +6.00 to -6.00 at maximum value. Cyl 4.00 dpt. Add +3.00 | +6.00 to -6.00 at maximum value. Cyl 4.00 dpt. Add +3.00 |  |
| VARIFOCAL COMFORT MAX:<br>Certified Prescription Range              | Min: 17mm                      | +6.00 to -6.00 at maximum value. Cyl 4.00 dpt. Add +3.00 | +6.00 to -6.00 at maximum value. Cyl 4.00 dpt. Add +3.00 |  |
| VARIFOCAL COMFORT SHORT:<br>Certified Prescription Range            | Min: 14mm                      | +6.00 to -6.00 at maximum value. Cyl 4.00 dpt. Add +3.00 | +6.00 to -6.00 at maximum value. Cyl 4.00 dpt. Add +3.00 |  |
| VARIFOCAL PHYSIO 3:<br>Certified Prescription Range                 | Min: 17mm                      | +6.00 to -6.00 at maximum value. Cyl 4.00 dpt. Add +3.00 | +6.00 to -6.00 at maximum value. Cyl 4.00 dpt. Add +3.00 |  |
| VARIFOCAL PHYSIO 3 SHORT:<br>Certified Prescription Range           | Min: 14mm                      | +6.00 to -6.00 at maximum value. Cyl 4.00 dpt. Add +3.00 | +6.00 to -6.00 at maximum value. Cyl 4.00 dpt. Add +3.00 |  |
| INTERVIEW 0.80 (Occupational Lens):<br>Certified Prescription Range | n/a                            | +5.00 to -3.00 at maximum value.<br>Cyl +/- 2.00 dpt.    | Not available  |  |
| INTERVIEW 1.30 (Occupational Lens):<br>Certified Prescription Range | n/a                            | +5.00 to -3.00 at maximum value.<br>Cyl +/- 2.00 dpt.    | Not available  |  |
| ACCESS 0.75 (Occupational Lens):<br>Certified Prescription Range    | n/a                            | +6.00 to -6.00 at maximum value. Cyl 4.00 dpt.           | Not available  |  |
| ACCESS 1.25 (Occupational Lens): Certified Prescription Range       | n/a                            | +6.00 to -6.00 at maximum value. Cyl 4.00 dpt.           | Not available  |  |
| COMPUTER 2V (Occupational Lens):<br>Certified Prescription Range    | n/a                            | +6.00 to -6.00 at maximum value. Cyl 4.00 dpt.           | Not available  |  |
| COMPUTER 3V (Occupational Lens):<br>Certified Prescription Range    | n/a                            | +6.00 to -6.00.00 at maximum value. Cyl 4.00 dpt.        | Not available  |  |



▶ The overview shows the maximum prescription range which is approved and certified. Depending on the size of the frame and the lens material and various other measurements, further restrictions may apply.

\*\*Maximum prism on all lenses is 3.00\*\*

|   |  | Optional Extras |      |         |  |  |
|---|--|-----------------|------|---------|--|--|
| CR39 1.67   | Poly   | AR<br>Coating   | Tint | Optifog | Transitions Brown  |  |
| +6.00 to -6.00 at maximum value. Cyl 4.00 dpt.              | +6.00 to -6.00 at maximum value. Cyl 4.00 dpt.           | Yes             | Yes  | Yes     | +6.00 to -6.00 at maximum value. Cyl 4.00 dpt.           |  |
| Not available   | +6.00 to -6.00 at maximum value. Cyl 4.00 dpt. Add +3.00 | Yes             | Yes  | No      | Not available  |  |
| +6.00 to -6.00 at maximum<br>value. Cyl 4.00 dpt. Add +3.00 | +6.00 to -6.00 at maximum value. Cyl 4.00 dpt. Add +3.00 | Yes             | Yes  | No      | Not available  |  |
| +6.00 to -6.00 at maximum value. Cyl 4.00 dpt. Add +3.00    | +6.00 to -6.00 at maximum value. Cyl 4.00 dpt. Add +3.00 | Yes             | Yes  | No      | Not available  |  |
| +6.00 to -6.00 at maximum value. Cyl 4.00 dpt. Add +3.00    | +6.00 to -6.00 at maximum value. Cyl 4.00 dpt. Add +3.00 | Yes             | Yes  | Yes     | +6.00 to -6.00 at maximum value. Cyl 4.00 dpt. Add +3.00 |  |
| +6.00 to -6.00 at maximum<br>value. Cyl 4.00 dpt. Add +3.00 | +6.00 to -6.00 at maximum value. Cyl 4.00 dpt. Add +3.00 | Yes             | Yes  | Yes     | +6.00 to -6.00 at maximum value. Cyl 4.00 dpt. Add +3.00 |  |
| +6.00 to -6.00 at maximum value. Cyl 4.00 dpt. Add +3.00    | +6.00 to -6.00 at maximum value. Cyl 4.00 dpt. Add +3.00 | Yes             | Yes  | Yes     | Not available  |  |
| +6.00 to -6.00 at maximum value. Cyl 4.00 dpt. Add +3.00    | +6.00 to -6.00 at maximum value. Cyl 4.00 dpt. Add +3.00 | Yes             | Yes  | Yes     | Not available  |  |
| Not available   | Not available  | Yes             | Yes  | No      | Not available  |  |
| Not available   | Not available  | Yes             | Yes  | No      | Not available  |  |
| Not available   | Not available  | Yes             | Yes  | Yes     | Not available  |  |
| Not available   | Not available  | Yes             | Yes  | Yes     | Not available  |  |
| Not available   | Not available  | Yes             | Yes  | Yes     | Not available  |  |
| Not available   | Not available  | Yes             | Yes  | Yes     | Not available  |  |

## Lens Options

For uvex RX sp frame collection:

5512, 5513

| Lens Type   | Parameter for centering lenses | Material      |               |
|---|--------------------------------|---------------|---------------|
| Description   | Maximum Height (Box Measure)   | CR39          | CR39 1.6      |
| SINGLE VISION:<br>Certified and available prescription range        | As required                    | Not available | Not available |
| BIFOCAL D28:<br>Certified and available prescription range          | Not available                  | Not available | Not available |
| VARIFOCAL QUADRO:<br>Certified and available prescription range     | Min: 18mm                      | Not available | Not available |
| VARIFOCAL QUADRO MINI:<br>Certified Prescription Range              | Not available                  | Not available | Not available |
| VARIFOCAL COMFORT MAX:<br>Certified Prescription Range              | Not available                  | Not available | Not available |
| VARIFOCAL COMFORT SHORT:<br>Certified Prescription Range            | Not available                  | Not available | Not available |
| VARIFOCAL PHYSIO 3:<br>Certified Prescription Range                 | Not available                  | Not available | Not available |
| VARIFOCAL PHYSIO 3 SHORT:<br>Certified Prescription Range           | Not available                  | Not available | Not available |
| INTERVIEW 0.80 (Occupational Lens):<br>Certified Prescription Range | n/a                            | Not available | Not available |
| INTERVIEW 1.30 (Occupational Lens):<br>Certified Prescription Range | n/a                            | Not available | Not available |
| ACCESS 0.75 (Occupational Lens):<br>Certified Prescription Range    | n/a                            | Not available | Not available |
| ACCESS 1.25 (Occupational Lens):<br>Certified Prescription Range    | n/a                            | Not available | Not available |
| COMPUTER 2V (Occupational Lens):<br>Certified Prescription Range    | n/a                            | Not available | Not available |
| COMPUTER 3V (Occupational Lens):<br>Certified Prescription Range    | n/a                            | Not available | Not available |



▶ The overview shows the maximum prescription range which is approved and certified. Depending on the size of the frame and the lens material and various other measurements, further restrictions may apply.

\*\*Maximum prism on all lenses is 3.00\*\*

|               |   | Optional Extras |      |         |                   |
|---------------|---|-----------------|------|---------|-------------------|
| CR39 1.67     | Poly  | AR<br>Coating   | Tint | Optifog | Transitions Brown |
| Not available | +3.50 to -3.50 at maximum value.<br>Cyl +/- 2.00 dpt. | Yes             | Yes  | No      | Not available     |
| Not available | Not available   | No              | No   | No      | Not available     |
| Not available | +3.50 to -3.50 at maximum value.<br>Cyl +/- 2.00 dpt. | Yes             | Yes  | No      | Not available     |
| Not available | Not available   | No              | No   | No      | Not available     |
| Not available | Not available   | No              | No   | No      | Not available     |
| Not available | Not available   | No              | No   | No      | Not available     |
| Not available | Not available   | No              | No   | No      | Not available     |
| Not available | Not available   | No              | No   | No      | Not available     |
| Not available | Not available   | No              | No   | No      | Not available     |
| Not available | Not available   | No              | No   | No      | Not available     |
| Not available | Not available   | No              | No   | No      | Not available     |
| Not available | Not available   | No              | No   | No      | Not available     |
| Not available | Not available   | No              | No   | No      | Not available     |
| Not available | Not available   | No              | No   | No      | Not available     |

## Lens Options

For uvex RX sp frame collection: 5510

| Lens Type   | Parameter for centering lenses | Material  |   |
|---|--------------------------------|---|---|
| Description   | Maximum Height (Box Measure)   | CR39  | CR39 1.6  |
| SINGLE VISION:<br>Certified and available prescription range        | As required                    | +5.00 to -5.00 at maximum value.<br>Cyl 2.00 dpt. Add +3.00 | +5.00 to -5.00 at maximum value.<br>Cyl 2.00 dpt. Add +3.00 |
| BIFOCAL D28:<br>Certified and available prescription range          | As required                    | +5.00 to -5.00 at maximum value.<br>Cyl 2.00 dpt. Add +3.00 | Not available   |
| VARIFOCAL QUADRO:<br>Certified and available prescription range     | Min: 18mm                      | +5.00 to -5.00 at maximum value.<br>Cyl 2.00 dpt. Add +3.00 | +5.00 to -5.00 at maximum value.<br>Cyl 2.00 dpt. Add +3.00 |
| VARIFOCAL QUADRO MINI:<br>Certified Prescription Range              | Min: 14mm                      | +5.00 to -5.00 at maximum value.<br>Cyl 2.00 dpt. Add +3.00 | +5.00 to -5.00 at maximum value.<br>Cyl 2.00 dpt. Add +3.00 |
| VARIFOCAL COMFORT MAX: Certified Prescription Range                 | Min: 17mm                      | +5.00 to -5.00 at maximum value.<br>Cyl 2.00 dpt. Add +3.00 | +5.00 to -5.00 at maximum value.<br>Cyl 2.00 dpt. Add +3.00 |
| VARIFOCAL COMFORT SHORT:<br>Certified Prescription Range            | Min: 14mm                      | +5.00 to -5.00 at maximum value.<br>Cyl 2.00 dpt. Add +3.00 | +5.00 to -5.00 at maximum value.<br>Cyl 2.00 dpt. Add +3.00 |
| VARIFOCAL PHYSIO 3:<br>Certified Prescription Range                 | Min: 17mm                      | +5.00 to -5.00 at maximum value.<br>Cyl 2.00 dpt. Add +3.00 | +5.00 to -5.00 at maximum value.<br>Cyl 2.00 dpt. Add +3.00 |
| VARIFOCAL PHYSIO 3 SHORT:<br>Certified Prescription Range           | Min: 14mm                      | +5.00 to -5.00 at maximum value.<br>Cyl 2.00 dpt. Add +3.00 | +5.00 to -5.00 at maximum value.<br>Cyl 2.00 dpt. Add +3.00 |
| INTERVIEW 0.80 (Occupational Lens):<br>Certified Prescription Range | n/a                            | +5.00 to -3.00 at maximum value.<br>Cyl +/- 2.00 dpt.       | Not available   |
| INTERVIEW 1.30 (Occupational Lens):<br>Certified Prescription Range | n/a                            | +5.00 to -3.00 at maximum value.<br>Cyl +/- 2.00 dpt.       | Not available   |
| ACCESS 0.75 (Occupational Lens):<br>Certified Prescription Range    | n/a                            | +5.00 to -5.00 at maximum value.<br>Cyl 2.00 dpt. Add +3.00 | Not available   |
| ACCESS 1.25 (Occupational Lens): Certified Prescription Range       | n/a                            | +5.00 to -5.00 at maximum value.<br>Cyl 2.00 dpt. Add +3.00 | Not available   |
| COMPUTER 2V (Occupational Lens):<br>Certified Prescription Range    | n/a                            | +5.00 to -5.00 at maximum value.<br>Cyl 2.00 dpt. Add +3.00 | Not available   |
| COMPUTER 3V (Occupational Lens):<br>Certified Prescription Range    | n/a                            | +5.00 to -5.00 at maximum value.<br>Cyl 2.00 dpt. Add +3.00 | Not available   |



► The overview shows the maximum prescription range which is approved and certified. Depending on the size of the frame and the lens material and various other measurements, further restrictions may apply.

\*\*Maximum prism on all lenses is 3.00\*\*

|   |   | Optional Extras |      |         |  |
|---|---|-----------------|------|---------|--|
| CR39 1.67   | Poly  | AR<br>Coating   | Tint | Optifog | Transitions Brown  |
| +5.00 to -5.00 at maximum value.<br>Cyl 2.00 dpt. Add +3.00 | +5.00 to -5.00 at maximum value.<br>Cyl 2.00 dpt. Add +3.00 | Yes             | Yes  | Yes     | +5.00 to -5.00 at maximum value. Cyl 2.00 dpt.           |
| Not available   | +5.00 to -5.00 at maximum value.<br>Cyl 2.00 dpt. Add +3.00 | Yes             | Yes  | No      | Not available  |
| +5.00 to -5.00 at maximum value.<br>Cyl 2.00 dpt. Add +3.00 | +5.00 to -5.00 at maximum value.<br>Cyl 2.00 dpt. Add +3.00 | Yes             | Yes  | No      | Not available  |
| +5.00 to -5.00 at maximum value.<br>Cyl 2.00 dpt. Add +3.00 | +5.00 to -5.00 at maximum value.<br>Cyl 2.00 dpt. Add +3.00 | Yes             | Yes  | No      | Not available  |
| +5.00 to -5.00 at maximum value.<br>Cyl 2.00 dpt. Add +3.00 | +5.00 to -5.00 at maximum value.<br>Cyl 2.00 dpt. Add +3.00 | Yes             | Yes  | Yes     | +5.00 to -5.00 at maximum value. Cyl 2.00 dpt. Add +3.00 |
| +5.00 to -5.00 at maximum value.<br>Cyl 2.00 dpt. Add +3.00 | +5.00 to -5.00 at maximum value.<br>Cyl 2.00 dpt. Add +3.00 | Yes             | Yes  | Yes     | +5.00 to -5.00 at maximum value. Cyl 2.00 dpt. Add +3.00 |
| +5.00 to -5.00 at maximum value.<br>Cyl 2.00 dpt. Add +3.00 | +5.00 to -5.00 at maximum value.<br>Cyl 2.00 dpt. Add +3.00 | Yes             | Yes  | Yes     | Not available  |
| +5.00 to -5.00 at maximum value.<br>Cyl 2.00 dpt. Add +3.00 | +5.00 to -5.00 at maximum value.<br>Cyl 2.00 dpt. Add +3.00 | Yes             | Yes  | Yes     | Not available  |
| Not available   | Not available   | Yes             | Yes  | No      | Not available  |
| Not available   | Not available   | Yes             | Yes  | No      | Not available  |
| Not available   | Not available   | Yes             | Yes  | Yes     | Not available  |
| Not available   | Not available   | Yes             | Yes  | Yes     | Not available  |
| Not available   | Not available   | Yes             | Yes  | Yes     | Not available  |
| Not available   | Not available   | Yes             | Yes  | Yes     | Not available  |

# uvex Prescription Multiple Form Request (For new customers only. Not for individual employee use

or for requesting a reprint of existing forms)

| Date:                        |  |                             |                               |                    |
|------------------------------|--|-----------------------------|-------------------------------|--------------------|
| Is this request for PRE-PRIN | NTED FORMS OR THE ORDERING FACILITY  | Y? (Delete as applicable)   | Pre-printed Forms             | Website            |
| Is this request for:         | Safety:  | Quantity:                   |                               |                    |
| (For printed forms only)     | Office:  | Quantity:                   |                               |                    |
|                              | Both:  | Quantity:                   |                               |                    |
| Where would you like printed | d forms to be sent? (Delete as applicable)   | End-user Distr              | ributor Optician              |                    |
| For the attention of:        |  |                             |                               |                    |
| Company Name:                |  |                             |                               |                    |
| Address:                     |  | Telephone No:               |                               |                    |
|                              |  |                             |                               |                    |
|                              |  | Fax No:                     |                               |                    |
|                              |  |                             |                               |                    |
|                              |  |                             |                               |                    |
| Tracking number (internal us | se only):  |                             |                               |                    |
| Distribution:                |  |                             |                               |                    |
| Authorising person:          |  |                             |                               |                    |
| Job title:                   |  |                             |                               |                    |
| Phone/Fax number:            |  |                             |                               |                    |
| Email address:               |  |                             |                               |                    |
| (must be supplied if request | ing to go on-line)   |                             |                               |                    |
| Frames allowed:              | All allowed? Please put a cross in the bo  | X:                          |                               |                    |
| Certain frames allowed?      | Please put a cross in the box and list the   | m below (showing specific c | olours if applicable):        |                    |
| Frames/colours:              |  |                             |                               |                    |
|                              |  |                             |                               |                    |
|                              |  |                             |                               |                    |
| Lenses:                      | Safety: CR39 Polycarbo   | onate All                   |                               |                    |
|                              | (Delete as applicable)   |                             |                               |                    |
| Lenses:                      | Office: CR39 (Delete as applicable)  |                             |                               |                    |
| Special instructions:        | Safety   |                             | If you require a specific opt |                    |
| (Delete as applicable)       | No cosmetic extras.  |                             | on the form, please enter t   | heir details here: |
|                              | uvex pay for eye test fee and invoice co<br>All lens variants allowed. (single vision, b | , ,                         |                               |                    |
|                              | Single vision only unless specified by au  |                             |                               |                    |
|                              | Office   |                             |                               |                    |
|                              | No cosmetic extras.  |                             |                               |                    |
|                              | uvex pay for eye test fee and invoice co<br>All lens variants allowed. (single vision, b |                             |                               |                    |
|                              | Single vision only.  |                             |                               |                    |
|                              |  |                             |                               |                    |

Once complete, fax form to 01252 731221 or scan and email to Sarah Swinden: s.swinden@uvex.co.uk

