


uvex

uvex xact-fit reusable hearing protection




The unique design of the **uvex xact-fit** is based on the anatomy of the ear canal, mimicking the natural oval shape.


This noticeably reduces pressure inside the ear, even when worn for extended periods as well as allowing fast, easy and accurate fitting.

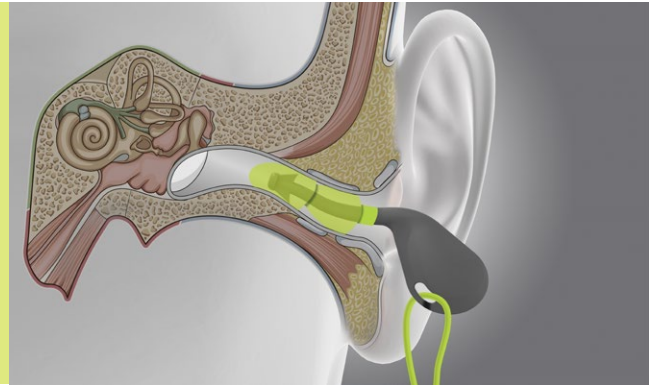

Correct earplug insertion

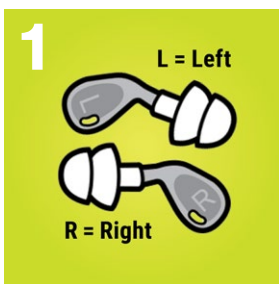

The reusable earplugs paddle are marked with a L (left side) and a R (right side).

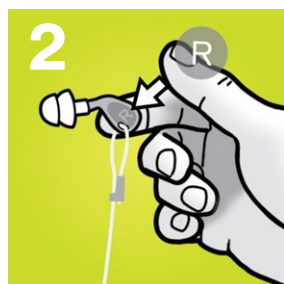

Right hand: take the R paddle of the reusable earplug between your thumb and forefinger.



Gently insert the earplug by twisting the paddle forward towards your jaw bone with a slight downwards motion to lock it in.



The earplug should be completely inside the ear canal when properly inserted. Repeat steps 2-4 with the left side.



Correct earplug insertion =

Secure, low-pressure fit with complete protection



Incorrect earplug insertion =

Poor fit, discomfort, and loss of protection

protecting people