

uvex




Type 3

Coverall donning

Shown accessories only exemplary

Donning video
uvex-safety.com/overalls

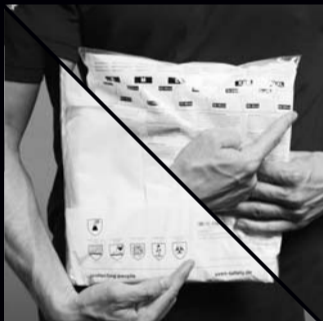

1. Check size and standards



2. Open and check for damages



3. Pull socks over trousers



4. Climb into the legs of the coverall while sitting



5. Put on rubber boots, pull coverall legs over rubber boots



6. Stand up and put on the sleeves



7. Close coverall up to the chest



8. Put on breathing mask and goggles. Then pull over the hood



9. Close the coverall completely



10. Remove the paper from the adhesive flap



11. Smooth out coverall and seal flap with adhesive tape



12. Put on finger loops



13. Put on gloves



14. Tape the glove to the coverall. Fold in the ends of the tape for easier removal



15. Tape the coverall leg to the boot



16. Additional taping of the flap



17. Tape the mask and goggle to the coverall



18. Stretch to ensure good fit and freedom of movement

uvex



Type 3

Coverall doffing

Shown accessories only exemplary

Doffing video
uvex-safety.com/overalls



1. With assistance release adhesive tab (flap, hood, boots). Leave gloves attached to the overall



2. Loosen the adhesive flap and open the zipper completely



3. Pull the hood backwards and turn inside out (grip at ear level)



4. Turn the coverall inside out while taking off the sleeves



5. Remove the sleeves and gloves by inverting, this ensures that contact is not made with the body



6. Pull the suit into the hollow of your knees and sit down. Remove the coverall and boot together



7. Take off mask and goggle



8. Do not reuse! Turn coverall inside out and dispose of with mask